



Warnings

Always make sure the luminaire is detached from the mains socket
 Always make sure the DC cable is detached from the power supply
 Staring at the operating light source may cause eye injury

#	SLR Description	Tools needed
a	Rotate the front window [1] by hand clockwise until it unsnaps. Lift the front window up to remove it from the Base [7]	-
b	Unplug the flat wire from the Light Source. Unscrew the 3 screws [2] and remove the Light Source [3]	Screwdriver T10
c	Remove the heatsink [4]	-
d	Disconnect the cable from the Hue Connect [6]. Unscrew the screw [5] and remove the Hue Connect	Screwdriver
e	Pull the cable [8] out of the strain relief and pull it out through the bottom side of the base [7]	-

#	COMPONENT	QTY	SKU	Color	Country
1	Front Window	1	929002376101	White	EU/UK
2	Screw	3	929002376201	Black	EU/UK
3	Light Source LED Module	1	929002376301	Rose	EU/UK
4	Heatsink	1	929002376401	Gold	EU/UK
5	Screw	1	929002376701	Silver	EU/UK
6	Control Gear Hue Connect	1	929002376801	Copper	EU/UK
7	Base	1	929002376901	White	NAM
8	Cable	1	929002377001	Black	NAM
			929002400901	Rose	NAM
			929002401001	Gold	NAM
			929002401101	Silver	NAM
			929002401201	Copper	NAM

STATUS	DESCRIPTION	DESIGN ID	01	2021-01-29
	D0059884	D0059884		
	Hue Iris Gen4 Disassembly Instruction	DOC 12NC		
		442295201841		
NAME	Vreeman, Matthijs	LOCAL PART ID	SH. 1	SH. 511
CHECKED		DATE	2021-01-29	CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding